


Installation Steps:

6. After positioning the panel with the proper spacing for the installation temperature, install a nail in the center hole of the panel. The panel will move evenly in both directions from the center out. (Figure D)


For the last cut piece of each course, a new center hole should be created by drilling a 1/8" hole in the top flange, near the center of the cut panel.

Figure D

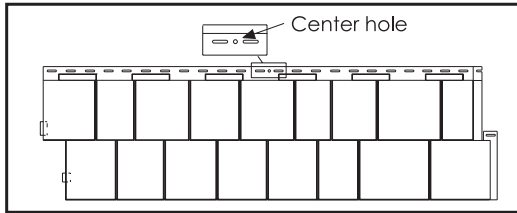


7. Always insert nails in the center of the slats at 16" intervals. (Figure E)

Figure E

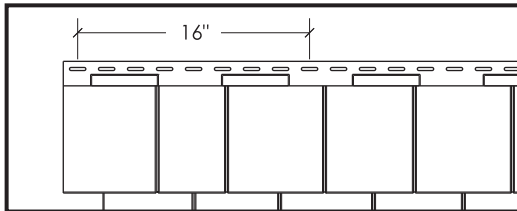


8. Never completely hammer the nail in. Leave a gap of 1/16". (Figure F)

Figure F

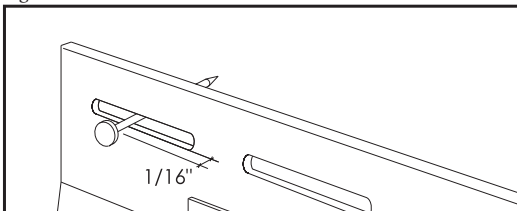

9. To eliminate stacking seams over seams, stagger subsequent courses in 8" increments.
10. Make certain that all the pieces are properly joined together. (Figure G)

Figure G

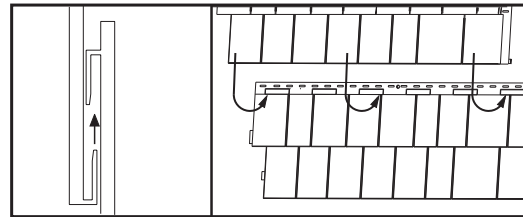

Alcoa Home Exteriors
RETAIL DISTRIBUTION GROUP

1590 Omega Drive • Pittsburgh, PA 15205 • 800-335-6701

Cedar Panels Installation Instructions

